

KromoTX1easyXAFS Tango Python Class

Contents :

- [Description](#)
- [Properties](#)
- [Commands](#)
 - [State](#)
 - [Status](#)
 - [StartAcquisition](#)
 - [StopAcquisition](#)
- [Attributes](#)
 - [ExpositionTime](#)
 - [Gain](#)
 - [FramesPerSecond](#)
 - [HighSpeedMode](#)
 - [FileDir](#)
 - [FilePrefix](#)
 - [Temperature](#)
 - [WindowMin](#)
 - [WindowMax](#)
 - [FileIndex](#)
 - [TotalAverageCounts](#)
 - [PhotonValue](#)
 - [Rol1Min](#)
 - [Rol1Max](#)
 - [Rol2Min](#)
 - [Rol2Max](#)
 - [Rol1Counts](#)
 - [Rol2Counts](#)
 - [Data](#)
 - [Frame](#)
- [States](#)

KromoTX1easyXAFS Class Identification :

Contact : at mail.desy.de - tnunez
 Class Family : Acquisition
 Platform : Unix Like
 Bus : USB
 Manufacturer : easyXAFS
 Manufacturer ref. : Kromo-TX1 Color Tender X-ray camera

KromoTX1easyXAFS Class Inheritance :

- [Tango::DeviceImpl](#)
 - KromoTX1easyXAFS

KromoTX1easyXAFS Class Description :

Class for controlling the Kromo-TX1 color tender X-ray camera from easyXAFS

KromoTX1easyXAFS Properties :

There is no class properties

Device Properties			
Name	Description	Type	Default Value
kromo_pids	Process ids from last server running. Filled by the tango device.	int[]	None
WindowMin	Window min (for photon processing)	int	-1
WindowMax	Window max (for photon processing)	int	-1
Threshold	Threshold	int	-1
Decluster	0-> false, 1->true	int	-1
Gain	Gain of the camera	int	-1
FramesPerSecond	Frames per second If HighSpeedMode == 0 -> max value is 80 If HighSpeedMode == 1 -> max values is 170	double	-1

KromoTX1easyXAFS Class Commands				
Name	Input type	Output type	Level	Description
State	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its device_state data member) and returns it to the caller.
Status	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its device_status data member) and returns it to the caller.
StartAcquisition	DEV_VOID	DEV_VOID	OPERATOR	Start acquisition
StopAcquisition	DEV_VOID	DEV_VOID	OPERATOR	None.

Command State :

This command gets the device state (stored in its device_state data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none
Output Argument	Tango::DEV_STATE	Device state
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..

Command allowed for	All states	..
---------------------	------------	----

Command Status :

This command gets the device status (stored in its device_status data member) and returns it to the caller.

Status Definition		
Input Argument	Tango::DEV_VOID	none
Output Argument	Tango::CONST_DEV_STRING	Device status
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command StartAcquisition :

Start acquisition

StartAcquisition Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command StopAcquisition :

StopAcquisition Definition		
Input Argument	Tango::DEV_VOID	

TotalAverageCounts	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Total counts in Rol (depends on PhotonValue)
PhotonValue	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Average pixel value counted in the detector
Rol1Min	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Rol for computing counts
Rol1Max	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Rol for computing counts
Rol2Min	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Rol for computing counts
Rol2Max	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Rol for computing counts
Rol1Counts	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Counts in Rol1
Rol2Counts	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Counts in Rol2
Data	false	false	Spectrum	READ	Tango::DEV_DOUBLE	OPERATOR	
Frame	false	false	Image	READ	Tango::DEV_DOUBLE	OPERATOR	Depends on PhotonValue

There is no dynamic attribute defined.

Attribute ExpositionTime :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	s
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Gain :

Read gain from the camera. The set value is given in the property Gain of the tango device.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	600
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute FramesPerSecond :

Read the fps from the camera. The value is set from the property of the tango device.

- If HighSpeedMode == 0 -> max value is 80
- If HighSpeedMode == 1 -> max values is 170

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	170
min_value	1
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false

Push DataReady event by user code	false
-----------------------------------	-------

Attribute HighSpeedMode :

0-> off, 1-> on

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	1
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute FileDir :

Save directory

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false

Read allowed for	All states
Write allowed for	All states

max_warning	
min_warning	
delta_time	
delta_val	

Push DataReady event by user code	false
-----------------------------------	-------

Attribute FilePrefix :

Prefix of the file were the data and parameters are save.
 Data is saved in [FilePrefix][FileIndex]_array.npy. Parameters in [FilePrefix]_parameters. If the file [FilePrefix][FileIndex]_parameters exists, the data are loaded and not new data are taken.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Temperature :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false

Attribute Properties	
label	
unit	Celsius
standard unit	
display unit	
format	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set

Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute WindowMin :

Show current window (set in the property).

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute WindowMax :

Show current window (set in the property).

Attribute Definition	
Attribute Type	Scalar

Attribute Properties	
label	

Attribute Event Criteria	
Periodic	Not set

R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute FileIndex :

Index to append to the file name. It will be increased by one after use.
Avoid loading of files if not explicitly wanted.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute TotalAverageCounts :

Total counts in RoI (depends on PhotonValue)

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute PhotonValue :

Average pixel value counted in the detector

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Rol1Min :

Rol for computing counts

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	255
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Rol1Max :

Rol for computing counts

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	255
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Rol2Min :

Rol for computing counts

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	255
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Rol2Max :

Rol for computing counts

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	255
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Rol1Counts :

Counts in Rol1

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Rol2Counts :

Counts in Rol2

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

min_warning	
delta_time	
delta_val	

code _____

Attribute Data :

Attribute Definition	
Attribute Type	Spectrum (255)
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Frame :

Depends on PhotonValue

Attribute Definition	
Attribute Type	Image (2000 x 2000)
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false

Read allowed for	All states

min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Push Archive event by user code	false
Push DataReady event by user code	false

KromoTX1easyXAFS Class States	
Name	Description
ON	
MOVING	
FAULT	