

## ProsilicaCam Tango Cpp Class

### **Contents :**

- [Description](#)
- [Properties](#)
- [Commands](#)
  - [State](#)
  - [Status](#)
  - [StartAcquisition](#)
  - [InitCamera](#)
  - [CleanupCamera](#)
  - [DumpCameraSettings](#)
  - [StopAcquisition](#)
  - [StartSingleAcquisition](#)
- [Attributes](#)
  - [FileDir](#)
  - [FilePrefix](#)
  - [FileStartNum](#)
  - [FilePostfix](#)
  - [FileSaving](#)
  - [Exposure](#)
  - [Gain](#)
  - [BinningX](#)
  - [BinningY](#)
  - [RegionX](#)
  - [RegionXwidth](#)
  - [RegionY](#)
  - [RegionYheight](#)
  - [FirmwareVersion](#)
  - [SensorType](#)
  - [BitsPixel](#)
  - [BitsPixelMax](#)
  - [InfoPartNumber](#)
  - [InfoPartVersion](#)
  - [InfoAccess](#)
  - [InfoInterfaceId](#)
  - [InfoInterfaceType](#)
  - [PacketSize](#)
  - [StreamBytesSec](#)
  - [MinWidth](#)
  - [MinHeight](#)
  - [MaxBinningX](#)
  - [MinBinningX](#)
  - [StepBinningX](#)
  - [MaxBinningY](#)
  - [MinBinningY](#)
  - [StepBinningY](#)
  - [ExposureMode](#)
  - [AutoWhiteBalance](#)
  - [RedBalance](#)
  - [BlueBalance](#)
  - [FrameRate](#)
  - [AutoGain](#)
  - [TriggerMode](#)
  - [PixelFormat](#)
  - [AcquisitionMode](#)
  - [AcquisitionCount](#)
  - [SensorWidth](#)
  - [SensorHeight](#)

- [MaxWidth](#)
  - [MaxHeight](#)
  - [TotalBytesPerFrame](#)
  - [FlagDebugMode](#)
  - [ImageFormat](#)
  - [ImageCounter](#)
  - [FrecuencySaveFile](#)
  - [InfoCamerald](#)
  - [ImageEnc](#)
  - [ActivateBildOperations](#)
  - [Bild](#)
  - [Bild\\_ulong](#)
  - [Bild\\_uchar](#)
  - [Bild\\_ushort](#)
  - [Bild\\_ucharR](#)
  - [Bild\\_ucharG](#)
  - [Bild\\_ucharB](#)
  - [Bild\\_log](#)
  - [Bild\\_sqrt](#)
- [States](#)
- 

#### **ProsilicaCam Class Identification :**

Contact : at mail.desy.de - tnunez  
 Class Family : Acquisition  
 Platform : All Platforms  
 Bus : FireWire  
 Manufacturer : none  
 Manufacturer ref. :

#### **ProsilicaCam Class Inheritance :**

- [Tango::DeviceImpl](#)
  - ProsilicaCam

#### **ProsilicaCam Class Description :**

Server for the ProsilicaCam Camera from Prosilica

---

#### **ProsilicaCam Properties :**

**There is no class properties**

Device Properties			
Name	Description	Type	Default Value
XImageSize	Max Pixel Size of the Camera	int	none
YImageSize	Max y pixel size of the camera	int	none
IpAddress	Ip Address of the camera.	String	None
CameraId	Camera Id	int	-1

---

ProsilicaCam Class Commands				
Name	Input type	Output type	Level	Description
<a href="#">State</a>	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its <i>device_state</i> data member) and returns it to the caller.
<a href="#">Status</a>	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its <i>device_status</i> data member) and returns it to the caller.
<a href="#">StartAcquisition</a>	DEV_VOID	DEV_VOID	OPERATOR	Start the thread for taking images
<a href="#">InitCamera</a>	DEV_VOID	DEV_LONG	OPERATOR	Initialize the camera (driver)
<a href="#">CleanupCamera</a>	DEV_VOID	DEV_LONG	OPERATOR	None.
<a href="#">DumpCameraSettings</a>	DEV_VOID	DEV_LONG	OPERATOR	Write camera settings to file
<a href="#">StopAcquisition</a>	DEV_VOID	DEV_VOID	OPERATOR	Stop image acquisition
<a href="#">StartSingleAcquisition</a>	DEV_VOID	DEV_VOID	OPERATOR	Take a picture and save it to a file.

### Command State :

This command gets the device state (stored in its *device\_state* data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::DEV_STATE	State Code
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

### Command Status :

This command gets the device status (stored in its *device\_status* data member) and returns it to the caller.

Status Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::CONST_DEV_STRING	Status description
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..

Command allowed for	All states	..
---------------------	------------	----

---

**Command StartAcquisition :**

Start the thread for taking images

StartAcquisition Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

---

**Command InitCamera :**

Initialize the camera (driver)

InitCamera Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_LONG	Completion status
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

---

**Command CleanupCamera :**

CleanupCamera Definition		
Input Argument	Tango::DEV_VOID	

Output Argument DisplayLevel	Tango::DEV_LONG OPERATOR	Completion Status ..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

---

### **Command DumpCameraSettings :**

Write camera settings to file

<b>DumpCameraSettings Definition</b>		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_LONG	Completion status
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

---

### **Command StopAcquisition :**

Stop image acquisition

<b>StopAcquisition Definition</b>		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

---

### **Command StartSingleAcquisition :**

Take a picture and save it to a file.

StartSingleAcquisition Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
		..
Command allowed for	All states	..

ProsilicaCam Class Attributes							
Name	Inherited	Abstract	Attr. type	R/W type	Data type	Level	Description
<a href="#">FileDir</a>	false	false	Scalar	READ_WRITE	Tango::DEV_STRING	OPERATOR	Path to the camera image files.
<a href="#">FilePrefix</a>	false	false	Scalar	READ_WRITE	Tango::DEV_STRING	OPERATOR	The prefix of the image files to be created. The full image file name will be composed as <b>\nprefix_number.postfix</b>  when acquiring images.
<a href="#">FileStartNum</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	The file number used when storing an image file. After saving a file, this number gets increased by one. To override an image file, the file number has to be set again.
<a href="#">FilePostfix</a>	false	false	Scalar	READ_WRITE	Tango::DEV_STRING	OPERATOR	The Prosilica Camera server allows the following postfix: <b>\n.bmp</b> <b>\n.bin = Binary data file with header.</b> <b>\n.png</b>  <b>\n.tif</b> The postfix determines the image format for the saved image files.
<a href="#">FileSaving</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Save a file for every image taken when true.
<a href="#">Exposure</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">Gain</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">BinningX</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">BinningY</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">RegionX</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	

<a href="#">RegionXwidth</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">RegionY</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">RegionYheight</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">FirmwareVersion</a>	false	false	Scalar	READ	Tango::DEV_STRING	OPERATOR	
<a href="#">SensorType</a>	false	false	Scalar	READ	Tango::DEV_STRING	OPERATOR	
<a href="#">BitsPixel</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Bits/Pixel (readout from the camera at initialize)
<a href="#">BitsPixelMax</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	Bits/Pixel Maximum (readout from the camera at initialize)
<a href="#">InfoPartNumber</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	Together with PartVersion indentifies the type of the camera (readout from info)
<a href="#">InfoPartVersion</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	Together with PartNumber indentifies the type of the camera (readout from info)
<a href="#">InfoAccess</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	Type of access allowed (readout from info)
<a href="#">InfoInterfaceId</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	An Id value for the interface or bus. It can change each time PvApi is initialized (readout from info)
<a href="#">InfoInterfaceType</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	The interface type (firewall or ethernet) (readout from info)
<a href="#">PacketSize</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Maximum packet size from camera (for images)
<a href="#">StreamBytesSec</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Bandwidth of image data (bytes/sec)
<a href="#">MinWidth</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	Sensor Width (readout from the camera at initialization)
<a href="#">MinHeight</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	Sensor Height (readout from the camera at initialization)
<a href="#">MaxBinningX</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	
<a href="#">MinBinningX</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	
<a href="#">StepBinningX</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	
<a href="#">MaxBinningY</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	
<a href="#">MinBinningY</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	
<a href="#">StepBinningY</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	
<a href="#">ExposureMode</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">AutoWhiteBalance</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">RedBalance</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">BlueBalance</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">FrameRate</a>	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	
<a href="#">AutoGain</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">TriggerMode</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">PixelFormat</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">AcquisitionMode</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">AcquisitionCount</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	

<a href="#">SensorWidth</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	
<a href="#">SensorHeight</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	
<a href="#">MaxWidth</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	
<a href="#">MaxHeight</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	
<a href="#">TotalBytesPerFrame</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">FlagDebugMode</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">ImageFormat</a>	false	false	Scalar	READ	Tango::DEV_STRING	OPERATOR	
<a href="#">ImageCounter</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	
<a href="#">FrecuencySaveFile</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
<a href="#">InfoCamerald</a>	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	Unique Id of the camera.
<a href="#">ImageEnc</a>	false	false	Scalar	READ	Tango::DEV_ENCODED	EXPERT	
<a href="#">ActivateBildOperations</a>	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Set to 1 compute bild in log, 2 in sqrt and 1 both.
<a href="#">Bild</a>	false	false	Image	READ	Tango::DEV_DOUBLE	EXPERT	
<a href="#">Bild_ulong</a>	false	false	Image	READ	Tango::DEV_ULONG	EXPERT	
<a href="#">Bild_uchar</a>	false	false	Image	READ	Tango::DEV_UCHAR	EXPERT	
<a href="#">Bild_ushort</a>	false	false	Image	READ	Tango::DEV_USHORT	EXPERT	
<a href="#">Bild_ucharR</a>	false	false	Image	READ	Tango::DEV_UCHAR	EXPERT	
<a href="#">Bild_ucharG</a>	false	false	Image	READ	Tango::DEV_UCHAR	EXPERT	
<a href="#">Bild_ucharB</a>	false	false	Image	READ	Tango::DEV_UCHAR	EXPERT	
<a href="#">Bild_log</a>	false	false	Image	READ	Tango::DEV_DOUBLE	EXPERT	
<a href="#">Bild_sqrt</a>	false	false	Image	READ	Tango::DEV_DOUBLE	EXPERT	

**There is no dynamic attribute defined.**

**Attribute FileDir :**

Path to the camera image files.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	Image File Path
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user	



delta_time	
delta_val	

code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute FilePrefix :**

The prefix of the image files to be created.  
The full image file name will be composed as  
 \n**prefix\_number.postfix** \n  
 \nwhen acquiring images.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	Image File Prefix
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute FileStartNum :**

The file number used when storing an image file.  
After saving a file, this number gets increased by one.  
To override an image file, the file number has to be set again.

Attribute Definition	

Attribute Properties	

Attribute Event Criteria	
Periodic	Not set

Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

label	Image File Number
unit	
standard unit	
display unit	
format	%5d
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute FilePostfix :**

The Prosilica Camera server allows the following postfix:\n

\n**.bmp** \n

\n**.bin = Binary data file with header.**\n

\n**.png** \n

\n

\n**.tif** \n

\nThe postfix determines the image format for the saved\nimage files.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	Image File Postfix
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false

Push DataReady event by user code	Not set
-----------------------------------	---------

**Attribute FileSaving :**

Save a file for every image taken when true.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	File Saving
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute Exposure :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set

Read allowed for	All states
Write allowed for	All states

min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute Gain :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute BinningX :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false

Write allowed for	All states
-------------------	------------

min_warning	
delta_time	
delta_val	

Push DataReady event by user code	Not set
-----------------------------------	---------

**Attribute BinningY :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute RegionX :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute RegionXwidth :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute RegionY :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute RegionYheight :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute FirmwareVersion :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute SensorType :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute BitsPixel :**

Bits/Pixel (readout from the camera at initialize)

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set



### **Attribute BitsPixelMax :**

Bits/Pixel Maximum (readout from the camera at initialize)

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

---

### **Attribute InfoPartNumber :**

Together with PartVersion indentifies the type of the camera (readout from info)

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

---

### **Attribute InfoPartVersion :**

Together with PartNumber identifies the type of the camera (readout from info)

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

---

### **Attribute InfoAccess :**

Type of access allowed (readout from info)

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

---

### **Attribute InfoInterfaceId :**

An Id value for the interface or bus. It can change each time PvApi is initialized (readout from info)

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

---

### **Attribute InfoInterfaceType :**

The interface type (firewall or ethernet) (readout from info)

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

---

**Attribute PacketSize :**

Maximum packet size from camera (for images)

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

---

**Attribute StreamBytesSec :**

Bandwidth of image data (bytes/sec)

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

---

**Attribute MinWidth :**

Sensor Width (readout from the camera at initialization)

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

---

**Attribute MinHeight :**

Sensor Height (readout from the camera at initialization)

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute MaxBinningX :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute MinBinningX :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute StepBinningX :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute MaxBinningY :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute MinBinningY :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute StepBinningY :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute ExposureMode :**



Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

---

**Attribute AutoWhiteBalance :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

---

**Attribute RedBalance :**

---

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute BlueBalance :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute FrameRate :**

Attribute Definition	
Attribute Type	Scalar

Attribute Properties	
label	

Attribute Event Criteria	
Periodic	Not set

R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute AutoGain :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute TriggerMode :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE

Attribute Properties	
label	
unit	
standard unit	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set

Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute PixelFormat :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute AcquisitionMode :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set

Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute AcquisitionCount :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute SensorWidth :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set

Memorized	Not set
Read allowed for	All states

max_alarm
min_alarm
max_warning
min_warning
delta_time
delta_val

Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute SensorHeight :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute MaxWidth :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false

Read allowed for	All states
------------------	------------

max_warning	
min_warning	
delta_time	
delta_val	

Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute MaxHeight :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute TotalBytesPerFrame :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false

delta_time	
delta_val	

Push DataReady event by user code	Not set
-----------------------------------	---------

**Attribute FlagDebugMode :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute ImageFormat :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set



**Attribute ImageCounter :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute FrecuencySaveFile :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed	All states

Attribute Properties	
label	Frecuency for Saving Files
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user	

for \_\_\_\_\_

code	false
Push DataReady event by user code	Not set

**Attribute InfoCamerald :**

Unique Id of the camera.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute ImageEnc :**

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_ENCODED
Display Level	EXPERT
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	RawImage
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
	Not

min_warning	
delta_time	
delta_val	

Archive Absolute Change	set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute ActivateBildOperations :**

Set to 1 compute bild in log, 2 in sqrt and 1 both.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	1->log, 2->sqrt,3->both
standard unit	
display unit	
format	
max_value	3
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute Bild :**

Attribute Definition	
Attribute Type	Image ( 1600 x 1200 )
R/W Type	READ

Attribute Properties	
label	
unit	
standard unit	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set

Data Type	Tango::DEV_DOUBLE
Display Level	EXPERT
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute Bild\_ulong :**

Attribute Definition	
Attribute Type	Image ( 1600 x 1200 )
R/W Type	READ
Data Type	Tango::DEV_ULONG
Display Level	EXPERT
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

### **Attribute Bild\_uchar :**

Attribute Definition	
Attribute Type	Image ( 1600 x 1200 )
R/W Type	READ
Data Type	Tango::DEV_UCHAR
Display Level	EXPERT

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set

Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute Bild\_ushort :**

Attribute Definition	
Attribute Type	Image ( 1600 x 1200 )
R/W Type	READ
Data Type	Tango::DEV_USHORT
Display Level	EXPERT
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute Bild\_ucharR :**

Attribute Definition	
Attribute Type	Image ( 1600 x 1200 )
R/W Type	READ
Data Type	Tango::DEV_UCHAR
Display Level	EXPERT
Inherited	false
Abstract	false

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set

Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute Bild\_ucharG :**

Attribute Definition	
Attribute Type	Image ( 1600 x 1200 )
R/W Type	READ
Data Type	Tango::DEV_UCHAR
Display Level	EXPERT
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute Bild\_ucharB :**

Attribute Definition	
Attribute Type	Image ( 1600 x 1200 )
R/W Type	READ
Data Type	Tango::DEV_UCHAR
Display Level	EXPERT
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false

Read allowed for	All states
------------------	------------

max_warning	
min_warning	
delta_time	
delta_val	

Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute Bild\_log :**

Attribute Definition	
Attribute Type	Image ( 1600 x 1200 )
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	EXPERT
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

**Attribute Bild\_sqrt :**

Attribute Definition	
Attribute Type	Image ( 1600 x 1200 )
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	EXPERT
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false

delta_time
delta_val

Push DataReady event by user code | Not set

---

---

ProsilicaCam Class States	
Name	Description
ON	
FAULT	
INIT	
RUNNING	Acquisition thread running