

PiezoPiE712 Tango Cpp Class

Contents :

- [Description](#)
- [Properties](#)
- [Commands](#)
 - [State](#)
 - [Status](#)
 - [MoveRelative](#)
 - [CheckDriftStability](#)
 - [StopMove](#)
 - [ResetMotor](#)
 - [Calibrate](#)
 - [StartWaveGenerator](#)
 - [StopWaveGenerator](#)
 - [DefineWaveform](#)
 - [ReadWaveform](#)
- [Attributes](#)
 - [Position](#)
 - [ServoMode](#)
 - [Error](#)
 - [UnitLimitMin](#)
 - [UnitLimitMax](#)
 - [Version](#)
 - [Voltage](#)
 - [OverflowStatus](#)
 - [SlewRate](#)
 - [WaveOffset](#)
 - [WaveAmplitude](#)
 - [WaveStartPoint](#)
 - [WaveSpeedUpDown](#)
 - [WaveSegmentLength](#)
 - [WaveWaveLength](#)
 - [WaveTableRate](#)
 - [Conversion](#)
 - [SlewDouble](#)
 - [WaveOutputCycles](#)
 - [ServoUpdateRate](#)
 - [WOS](#)
 - [FlagMoveByWaveGenerator](#)
- [States](#)

PiezoPiE712 Class Identification :

Contact : at mail.desy.de - tnunez
 Class Family : Motion
 Platform : Unix Like
 Bus : Socket
 Manufacturer : Physik Instrumente (PI)

PiezoPiE712 Class Inheritance :

- [Tango::DeviceImpl](#)
 - PiezoPiE712

PiezoPiE712 Class Description :

PiezoPiE712 Properties :

There is no class properties

Device Properties			
Name	Description	Type	Default Value
SocketDS		String	none
AxisNumber	Axis Number (from 1 to 3)	int	none

PiezoPiE712 Class Commands				
Name	Input type	Output type	Level	Description
State	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its <i>device_state</i> data member) and returns it to the caller.
Status	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its <i>device_status</i> data member) and returns it to the caller.
MoveRelative	DEV_DOUBLE	DEV_LONG	OPERATOR	None.
CheckDriftStability	DEV_DOUBLE	DEV_DOUBLE	OPERATOR	None.
StopMove	DEV_VOID	DEV_VOID	OPERATOR	None.
ResetMotor	DEV_VOID	DEV_VOID	OPERATOR	Reset master unit.
Calibrate	DEV_DOUBLE	DEV_VOID	OPERATOR	Only for compatibility reasons. Does nothing.
StartWaveGenerator	DEV_VOID	DEV_VOID	OPERATOR	Starts wave generator with the waveform defined in the corresponding attributes
StopWaveGenerator	DEV_VOID	DEV_VOID	OPERATOR	Stops wave generator.
DefineWaveform	DEV_VOID	DEV_VOID	OPERATOR	Define waveform with the corresponding attribute values.
ReadWaveform	DEV_VOID	DEV_STRING	OPERATOR	Read positions of the defined waveform.

Command State :

This command gets the device state (stored in its *device_state* data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::DEV_STATE	State Code
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command Status :

This command gets the device status (stored in its *device_status* data member) and returns it to the caller.

Status Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::CONST_DEV_STRING	Status description
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command MoveRelative :

MoveRelative Definition		
Input Argument	Tango::DEV_DOUBLE	
Output Argument	Tango::DEV_LONG	
DisplayLevel	OPERATOR	..
Inherited	false	..

Abstract	false	..
Polling Period	Not polled	..
Command NOT allowed for	• MOVING	..

Command CheckDriftStability :

CheckDriftStability Definition		
Input Argument	Tango::DEV_DOUBLE	
Output Argument	Tango::DEV_DOUBLE	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command NOT allowed for	• MOVING	..

Command StopMove :

StopMove Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command ResetMotor :

Reset master unit.

ResetMotor Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command Calibrate :

Only for compatibility reasons. Does nothing.

Calibrate Definition		
Input Argument	Tango::DEV_DOUBLE	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command StartWaveGenerator :

Starts wave generator with the waveform defined in the corresponding attributes

StartWaveGenerator Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..

Command allowed for	All states	..
---------------------	------------	----

Command StopWaveGenerator :

Stops wave generator.

StopWaveGenerator Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command DefineWaveform :

Define waveform with the corresponding attribute values.

DefineWaveform Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command ReadWaveform :

Read positions of the defined waveform.

ReadWaveform Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_STRING	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

PiezoPiE712 Class Attributes							
Name	Inherited	Abstract	Attr. type	R/W type	Data type	Level	Description
Position	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	
ServoMode	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
Error	false	false	Scalar	READ	Tango::DEV_STRING	OPERATOR	
UnitLimitMin	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	
UnitLimitMax	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	
Version	false	false	Scalar	READ	Tango::DEV_STRING	OPERATOR	
Voltage	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	
OverflowStatus	false	false	Scalar	READ	Tango::DEV_USHORT	OPERATOR	
SlewRate	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
WaveOffset	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
WaveAmplitude	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
WaveStartPoint	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
WaveSpeedUpDown	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
WaveSegmentLength	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
WaveWaveLength	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
WaveTableRate	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	
Conversion	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Only defined for being used in Online in sweep scans for converting speed to position units/s
SlewDouble	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	
							the number of wave generator cycles. IF 0,

WaveOutputCycles	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	the waveform\nis output without period limitation until WGO
ServoUpdateRate	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	the update rate [s]
WOS	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	WOS, the offset of the generator
FlagMoveByWaveGenerator	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	

There is no dynamic attribute defined.

Attribute Position :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	mum
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute ServoMode :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute Error :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false

Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute UnitLimitMin :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute UnitLimitMax :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set

Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute Version :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute Voltage :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute OverflowStatus :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_USHORT
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute SlewRate :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	physical units/s
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute WaveOffset :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set

Polling Period Memorized	Not polled true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

	set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute WaveAmplitude :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute WaveStartPoint :

--	--	--

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute WaveSpeedUpDown :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute WaveSegmentLength :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute WaveWaveLength :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set

Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute WaveTableRate :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute Conversion :

Only defined for being used in Online in sweep scans for converting speed to position units/s

Attribute	

Attribute	

Attribute Event Criteria	

Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute SlewDouble :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	physical units/s
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute WaveOutputCycles :

the number of wave generator cycles. IF 0, the waveform is output without period limitation until WGO

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute ServoUpdateRate :

the update rate [s]

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
	Not

Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Periodic	set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute WOS :

WOS, the offset of the generator

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute FlagMoveByWaveGenerator :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

PiezoPiE712 Class States	
Name	Description
ON	
MOVING	
FAULT	