

MTCADigitizer Tango Cpp Class

Contents :

- [Description](#)
- [Properties](#)
- [Commands](#)
 - [State](#)
 - [Status](#)
 - [StartAcquisition](#)
 - [StopAcquisition](#)
 - [CalibratePulse](#)
- [Attributes](#)
 - [NbTriggersSet](#)
 - [SignalOffsetChA](#)
 - [PeakThresholdChA](#)
 - [PeakThresholdChB](#)
 - [PeakThresholdChC](#)
 - [PeakThresholdChD](#)
 - [PeakPolarity](#)
 - [RecordsLastAcquisition](#)
 - [SignalOffsetChB](#)
 - [SignalOffsetChC](#)
 - [SignalOffsetChD](#)
 - [NbDetectedTriggers](#)
 - [ConversionPulse](#)
 - [MissedTriggers](#)
 - [BufferLoad](#)
 - [ReadoutPeriod](#)
 - [FirstTriggerId](#)
 - [LastTriggerId](#)
 - [MissedAnalysedTriggers](#)
 - [WriteRawData](#)
 - [FileDir](#)
 - [FilePrefix](#)
 - [FileStartNum](#)
 - [Index](#)
 - [Time](#)
- [States](#)

MTCADigitizer Class Identification :

Contact : at mail.desy.de - tnunez
 Class Family : OtherInstruments
 Platform : Unix Like
 Bus : Not Applicable
 Manufacturer : none
 Manufacturer ref. :

MTCADigitizer Class Inheritance :

- [Tango::DeviceImpl](#)
 - MTCADigitizer

MTCADigitizer Class Description :

MTCADigitizer Properties :

There is no class properties

Device Properties			
Name	Description	Type	Default Value
Slot	Number of the slot from the single board to be connected. AMC slots are sorted from left to right. To connect several single boards use, ex., 5-7	String	none
TransferMode	Transfer Mode. A device has to be shutdown before initialization with a different transfre mode. Possible values: multirecord, stream	String	stream
SamplesPerTrigger	Number of raw data samples per trigger, if set to -1 the current value is not modified.	int	-1
ConversionPulseSave	Updated when writing to ConversionPulse. Need it to set thresholds at start up.	double	none

MTCADigitizer Class Commands				
Name	Input type	Output type	Level	Description
State	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its device_state data member) and returns it to the caller.
Status	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its device_status data member) and returns it to the caller.
StartAcquisition	DEV_VOID	DEV_VOID	OPERATOR	Start acquisition
StopAcquisition	DEV_VOID	DEV_VOID	OPERATOR	Stop acquisition
CalibratePulse	DEV_DOUBLE	DEV_VOID	OPERATOR	Compute mV/a.u. factor

Command State :

This command gets the device state (stored in its device_state data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none
Output Argument	Tango::DEV_STATE	Device state

DisplayLevel Inherited	OPERATOR true	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command Status :

This command gets the device status (stored in its device_status data member) and returns it to the caller.

Status Definition		
Input Argument	Tango::DEV_VOID	none
Output Argument	Tango::CONST_DEV_STRING	Device status
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command StartAcquisition :

Start acquisition

StartAcquisition Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command StopAcquisition :

Stop acquisition

StopAcquisition Definition		
Input Argument	Tango::DEV_VOID	
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command CalibratePulse :

Compute mV/a.u. factor

CalibratePulse Definition		
Input Argument	Tango::DEV_DOUBLE	mV to calibrate to
Output Argument	Tango::DEV_VOID	
DisplayLevel	OPERATOR	..
Inherited	false	..
Abstract	false	..
Polling Period	Not polled	..
Command allowed for	All states	..

MTCADigitizer Class Attributes							
Name	Inherited	Abstract	Attr. type	R/W type	Data type	Level	Description
NbTriggersSet	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	Number of triggers to be taken
SignalOffsetChA	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Signal offset.
PeakThresholdChA	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	
PeakThresholdChB	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	
PeakThresholdChC	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	
PeakThresholdChD	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	
PeakPolarity	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	1 positive, -1 negative. Writing 0 also set it to

							positive.
RecordsLastAcquisition	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	Nb of records in the last acquisition.
SignalOffsetChB	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Signal offset.
SignalOffsetChC	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Signal offset.
SignalOffsetChD	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Signal offset.
NbDetectedTriggers	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	
ConversionPulse	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Conversion between mV and a.u.
MissedTriggers	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	Number of missed triggers in last acquisition.
BufferLoad	false	false	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	Percentage of buffer read at each call
ReadoutPeriod	false	false	Scalar	READ_WRITE	Tango::DEV_DOUBLE	OPERATOR	Seconds between readout buffered data
FirstTriggerId	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	First acquired trigger Id in the last acquisition
LastTriggerId	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	Last acquired trigger in last acquisition
MissedAnalysedTriggers	false	false	Scalar	READ	Tango::DEV_LONG	OPERATOR	Number of triggers lost going to analysis thread.
WriteRawData	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	1 -> to binary, 2 -> to nexus
FileDir	false	false	Scalar	READ_WRITE	Tango::DEV_STRING	OPERATOR	Directory to save the files to.
FilePrefix	false	false	Scalar	READ_WRITE	Tango::DEV_STRING	OPERATOR	Prefix for the name of the file where the data will be saved. The full name will be prefix_num.nxs for analysed data (including raw data if WriteRawData is set to 2) and prefix_raw_num.bin for raw if WriteRawData is set to 1.
FileStartNum	false	false	Scalar	READ_WRITE	Tango::DEV_LONG	OPERATOR	First number used for naming the data files.
Index	false	false	Spectrum	READ	Tango::DEV_LONG	OPERATOR	
Time	false	false	Spectrum	READ	Tango::DEV_DOUBLE	OPERATOR	

There is no dynamic attribute defined.

Attribute NbTriggersSet :

Number of triggers to be taken

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute SignalOffsetChA :

Signal offset.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	mV
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false

Push DataReady event by user code	false
-----------------------------------	-------

Attribute PeakThresholdChA :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	mV
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute PeakThresholdChB :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true

Attribute Properties	
label	
unit	mV
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
	Not

Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Relative Change	set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute PeakThresholdChC :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	mV
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute PeakThresholdChD :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE

Attribute Properties	
label	
unit	mV

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not

Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

	set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute PeakPolarity :

1 positive, -1 negative. Writing 0 also set it to positive.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	1
min_value	-1
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute RecordsLastAcquisition :

Nb of records in the last acquisition.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute SignalOffsetChB :

Signal offset.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	mV
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute SignalOffsetChC :

Signal offset.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	mV
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute SignalOffsetChD :

Signal offset.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true

Attribute Properties	
label	
unit	mV
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set

Read allowed for	All states
Write allowed for	All states

delta_time	
delta_val	

Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute NbDetectedTriggers :

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute ConversionPulse :

Conversion between mV and a.u.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled

Attribute Properties	
label	
unit	mV/a.u.
standard unit	
display unit	
format	%6.5
max_value	
min_value	
max_alarm	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set

Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute MissedTriggers :

Number of missed triggers in last acquisition.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute BufferLoad :

Percentage of buffer read at each call

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE

Attribute Properties	
label	
unit	%
standard unit	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set

Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute ReadoutPeriod :

Seconds between readout buffered data

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	s
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute FirstTriggerId :

First acquired trigger Id in the last acquisition

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute LastTriggerId :

Last acquired trigger in last acquisition

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute MissedAnalysedTriggers :

Number of triggers lost going to analysis thread.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute WriteRawData :

1 -> to binary, 2 -> to nexus

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	2
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute FileDir :

Directory to save the files to.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute FilePrefix :

Prefix for the name of the file where the data will be saved.
 The full name will be prefix_num.nxs for analysed data (including raw data if WriteRawData is set to 2) and prefix_raw_num.bin for raw if WriteRawData is set to 1.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_STRING
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute FileStartNum :

First number used for naming the data files.

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ_WRITE
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	true
Write hardware at init.	true
Read allowed for	All states
Write allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	0
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Index :

Attribute Definition	
Attribute Type	Spectrum (100)
R/W Type	READ
Data Type	Tango::DEV_LONG
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

Attribute Time :

Attribute Definition	
Attribute Type	Spectrum (2010000)
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	false
Abstract	false
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	
unit	
standard unit	
display unit	
format	
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	false

MTCADigitizer Class States	
Name	Description
ON	
MOVING	