

Adc Tango Cpp Class

Contents :

- [Description](#)
- [Properties](#)
- [Commands](#)
 - [State](#)
 - [Status](#)
- [Attributes](#)
 - [Value](#)
 - [NAverage](#)
- [States](#)

Adc Class Identification :

Contact : at null - null
Class Family :
Platform :
Bus :
Manufacturer :
Manufacturer ref. :

Adc Class Inheritance :

- [Tango::DeviceImpl](#)
 - Adc

Adc Class Description :

This is the abstract class interface for Adc`s.

Adc Properties :

There is no class properties

There is no device properties

Adc Class Commands				
Name	Input type	Output type	Level	Description
State	DEV_VOID	DEV_STATE	OPERATOR	This command gets the device state (stored in its <i>device_state</i> data member) and returns it to the caller.
Status	DEV_VOID	CONST_DEV_STRING	OPERATOR	This command gets the device status (stored in its <i>device_status</i> data member) and returns it to the caller.

Command State :

This command gets the device state (stored in its *device_state* data member) and returns it to the caller.

State Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::DEV_STATE	State Code
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

Command Status :

This command gets the device status (stored in its *device_status* data member) and returns it to the caller.

Status Definition		
Input Argument	Tango::DEV_VOID	none.
Output Argument	Tango::CONST_DEV_STRING	Status description
DisplayLevel	OPERATOR	..
Inherited	true	..
Abstract	true	..
Polling Period	Not polled	..
Command allowed for	All states	..

Adc Class Attributes							
Name	Inherited	Abstract	Attr. type	R/W type	Data type	Level	Description
Value	null	true	Scalar	READ	Tango::DEV_DOUBLE	OPERATOR	analog value
NAverage	null	true	Scalar	WRITE	Tango::DEV_SHORT	OPERATOR	number of values to average

There is no dynamic attribute defined.

Attribute Value :

analog value

Attribute Definition	
Attribute Type	Scalar
R/W Type	READ
Data Type	Tango::DEV_DOUBLE
Display Level	OPERATOR
Inherited	null
Abstract	true
Polling Period	Not polled
Memorized	Not set
Read allowed for	All states

Attribute Properties	
label	value
unit	a.u.
standard unit	a.u.
display unit	a.u.
format	%6.3f
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

Attribute NAverage :

number of values to average

Attribute Definition	
Attribute Type	Scalar
R/W Type	WRITE
Data Type	Tango::DEV_SHORT
Display Level	OPERATOR
Inherited	null
Abstract	true
Polling Period	Not polled
Memorized	Not set
Write allowed for	All states

Attribute Properties	
label	Number of values to average
unit	
standard unit	
display unit	
format	%6d
max_value	
min_value	
max_alarm	
min_alarm	
max_warning	
min_warning	
delta_time	
delta_val	

Attribute Event Criteria	
Periodic	Not set
Relative Change	Not set
Absolute Change	Not set
Archive Periodic	Not set
Archive Relative Change	Not set
Archive Absolute Change	Not set
Push Change event by user code	false
Push Archive event by user code	false
Push DataReady event by user code	Not set

There is no state defined